 


Description	Part No.	Description	Part No.
Rubber Pad Assembly	36501	Sear	36525
Cover Plug	36502	Advance Bar	36526
Spring, Sear Holder	36503	Spring, Advance Bar	36527
Spring Firing	36504	Trigger	36528
Firing Pin Nut	36505	Lever Seat	36529
Firing Pin Return Spring	36506	Hollow Pin	36530
Firing Pin Ring	36507	Threaded Pin	36531
Firing Pin	36508	Screw (M6X18)	36532
Sear Tube	36509	Firing Sleeve Bar	36533
Body	36510	Magazine Catch Spring	36534
Steel Liner	36511	Steel Ball (Φ 5)	36535
Stop	36512	Annular Spring	36536
Piston Sleeve	36513	Steel Ball (Φ 6)	36537
Piston Assembly	36514	Shear Clip	36538
Piston Ring	36515	Supporting Angle Piece	36539
Guide	36516	Circlip	36540
Base Plate	36517	Push Pin	36541
Trigger Spring	36518	Screw (M3X5)	36542
Screw (M6X10)	36519	Positioning Spring	36543
Pin (A4X18)	36520	Positioning Lever	36545
Screw (M16X10)	36521	Covering Plate Assembly	36546
Lever Spring	36522	Screw (M5X12)	36547
Firing Lever	36523	Screw (M5X8)	36548
Sear Spring	36524		


Piston Assembly

Piston = 36514
Piston Ring = 36515



Covering Plate Assembly

Covering plate = 36546
Positioning lever = 36545
Positioning spring = 36543
2 X Screw (M3X5) = 36542

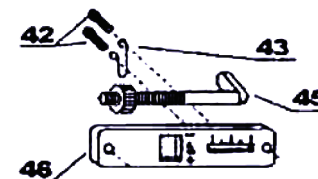

Handle Assembly

Rubber pad = 36501
Supporting angle piece = 36539
Trigger spring = 36518
Screw (M6X10) = 36519
2 X Screw (M16X10) = 36521
Pin (A4X18) = 36520
Lever spring = 36522
Firing Lever = 36523

